

CAMS for 3572 Mortice Lock (with latch)

Function		Inside Cam	Outside Cam
Egress Inside Handle: Always free Outside Handle: Locked or unlocked by key		Z	None
Store Room Inside Handle: Always free Outside Handle: Always rigid. Key retracts latch <ul style="list-style-type: none"> Locking bar must be placed in the locking position 		X	None
Entry Inside Handle: Snib locks and unlocks handles. If the inside handle is set to 'escape', then the snib will lock and unlock outside handle only Outside Handle: Locked or unlocked by key		W	D
Pull handle & electric strike Inside : Snib pulls latch Outside: key pulls latch		X	X
Deadlock Inside Handle: Locked or unlocked by key Outside Handle: Locked or unlocked by key		Z	Z
Y cams are used for 3571 & 3573 mortice		Sliding and deadbolt mortice locks	
F cams are used for Fabricator locks			

